

SimpleBIM Parameter Configuration (IFC)

System parameters

Name in BIMeye - Name in model

CQ_InstanceGUID - GlobalId

Level - Level;Building Storey name

Other parameters, Name in model:

To get the right parameter name in model you can use the Copy Name function in SimpleBIM, right click on a Property in the Properties dialog and select Copy Special and then Copy Name to get the right name.

